
V. USING PROGRAMMING MODE

Use PROGRAMMING MODE to customize the AD-RC02 LED functions. To enter PROGRAMMING MODE:

- A. Make sure that the transmitter, Electronic Speed Controller (ESC), and AD-RC02 are all OFF.
- B. Power ON your transmitter first (keep ESC/AD-RC02 powered OFF).
- C. Turn the steering wheel to FULL RIGHT and HOLD.
- D. Power ON the ESC and AD-RC02. Keep holding the steering wheel to FULL RIGHT.
- E. After a long "BEEP" and the hazard lamps turn on, you are now in PROGRAMMING MODE.

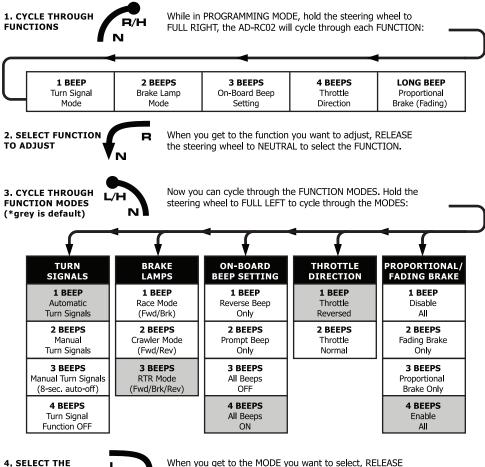

4. SELECT THE **DESIRED MODE**



the steering wheel to NEUTRAL to select the MODE.

5. CONTINUE OR **EXIT PROGRAMMING**

04



To continue programming other functions, hold steering wheel to FULL RIGHT and return to programming STEP 1 above

To save your settings and exit PROGRAMMING MODE, simply turn off the AD-RC02 first, then your ESC and transmitter.

Please check our website at **www.integy.com** for any product updates and the most up-to-date instructions.



LED MULTI-FUNCTION LIGHTING SYSTEM FOR TRX-4 DEFENDER BODY -SMD BOARD VERSION P/N #C28256

PARTS LISTING			
Control Unit	1x		
Signal Cables	2x		
Extension Cable	1x		
Y-Cable	1x		
User Manual	1x		
SMD Boards and Harnesses			

PRODUCT FEATURES


- Specifically for Traxxas TRX-4 Defender Body
- Full remote operation and custom LED functions Compatible with most 2-channel radio systems
- Program all functions using transmitter
- Multiple LED light functions
- Programmable on-board reversing sound
- Powered by receiver 5V-6V BEC
- No external power source required
- Extra ports for optional strobe or rock lamps
- Board-mounted SMD LEDs simplify installation

LED FUNCTIONS

- Head Lamp Operation: Switch head lamps from low-beam, to high-beam, to "off"
- Tail Lamp Operation: Auto brake, 3 tail lamp modes (Normal, Crawler, Race)
- Proportional Brake Intensity: Brake lamp brightness increases with braking action
- Reverse Lamp Operation: Automatic reverse LED activation when using reverse
- Reverse Sound: Programmable back-up beep
- Turn Signals: Auto or manual signal modes
- Optional Strobe / Rock Lamps (3 modes)
- Brake Lamp Fade In / Out


I. WIRING INSTRUCTIONS

- 1. Before installing, make sure that your RC radio system and Electronic Speed Controller (ESC) are both turned OFF, and disconnect any battery pack connected to the ESC.
- 2. Please install the AD-RC02 control unit in a protected location on the vehicle where the included signal cables can reach the Rx, and the ESC and steering servo cables will reach the AD-RC02.
- 3. Using one of the included signal cables, connect your Rx "channel 1" to AD-RC02 "CH.1". Use the other signal cable to connect your Rx "channel 2" to AD-RC02 "CH.2".
- 4. Plug your steering servo cable into the AD-RC02 "SERVO" port.
- 5. Plug your ESC cable into the AD-RC02 "ESC" port, see diagram below (NOTE; items shown are not to scale).

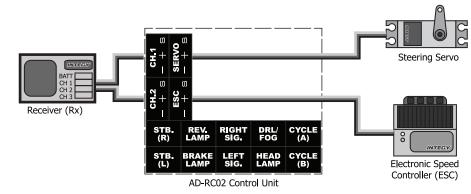


01 AD-RC02.MSV5A • (C) 2018 Integy Inc.

II. SMD PANEL WIRING DIAGRAM

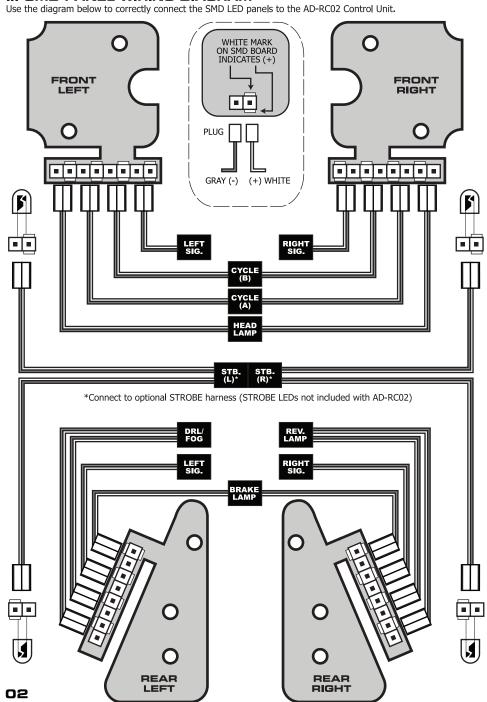

III. CONTROL REFERENCE

Use the guide below to understand Channel 1 (steering wheel) function icons. **NOTE:** When adjusting any of the AD-RC02 functions, Channel 2 (throttle) must be in NEUTRAL before you begin.

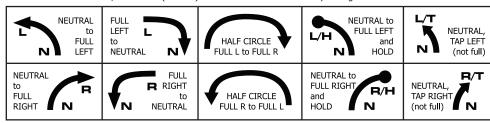


IV. FUNCTIONS OPERATION

How to use and switch the AD-RC02 light functions (Be sure to confirm each selection).

NIGHT MODE				
1 BEEP	2 BEEPS	2 BEEPS	2 BEEPS	Confirm
L/H N	Head Lamp 50% Brake Lamp 50% DRL/FOG Lamp ON	Head Lamp ON Brake Lamp 50% DRL/FOG Lamp ON	All Lamps OFF	2

OPTION: CYCLE	(A), CYCLE (B)				
1 BEEP	2 BEEPS	2 BEEPS	2 BEEPS	2 BEEPS	Confirm
R/H N	Cycle (A) ON Cycle (B) OFF	Cycle (A) ON and Cycle (B) ON	Cycle (A) OFF Cycle (B) ON	Cycle (A) OFF and Cycle (B) OFF	R

OPTION: STROBE (L), STROBE (R)					
1 BEEP	2 BEEPS	2 BEEPS	2 BEEPS	2 BEEPS	Confirm
THEN	Strobe (L) ON Strobe (R) ON	Strobe Flash Mode 1 (Random)	Strobe Flash Mode 2 (Pattern)	Strobe (L) OFF Strobe (R) OFF	R

 

*HOW TO USE "CUSTOM ON":

Turn on light functions as you like, then go to "Save Custom ON" to save your function selections. These saved functions will automatically be set each time you turn on the AD-RC02 during vehicle startup.

MANUAL TURN SIGNALS (*SEE PROGRAMMING MODE)



To manually activate LEFT turn signals, turn steering wheel (Channel 1) at least 5% then release - the LEFT turn signals will turn ON.



To manually activate RIGHT turn signals, turn steering wheel (Channel 1) at least 5% then release - the RIGHT turn signals will turn ON.

AD-RC02_MSV58 • (C) 2018 Integy Inc.