



Assemble and mount Setup Station plates to your chassis.

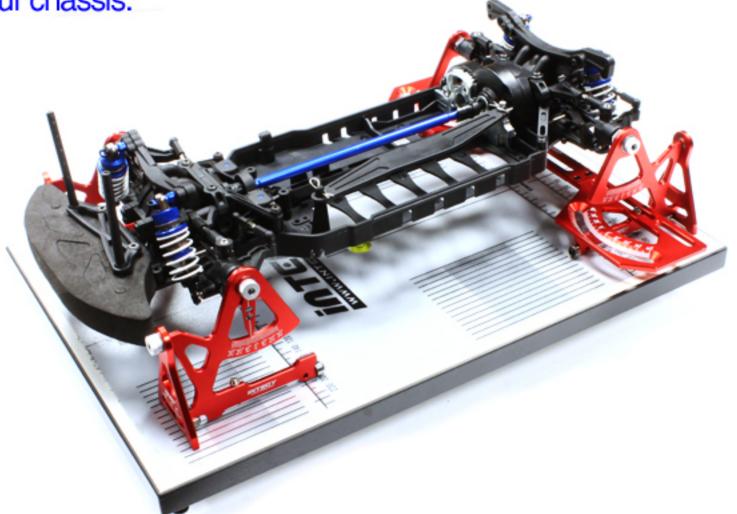

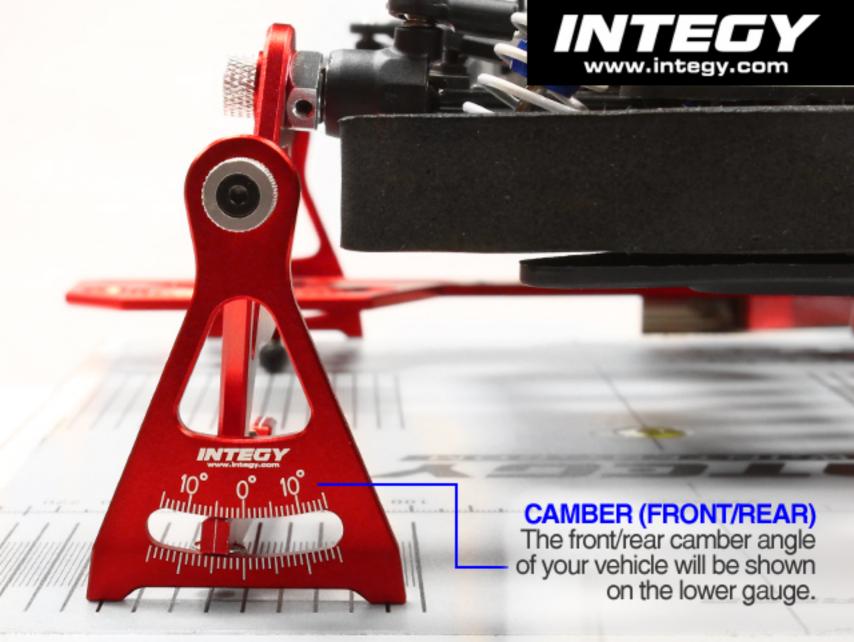

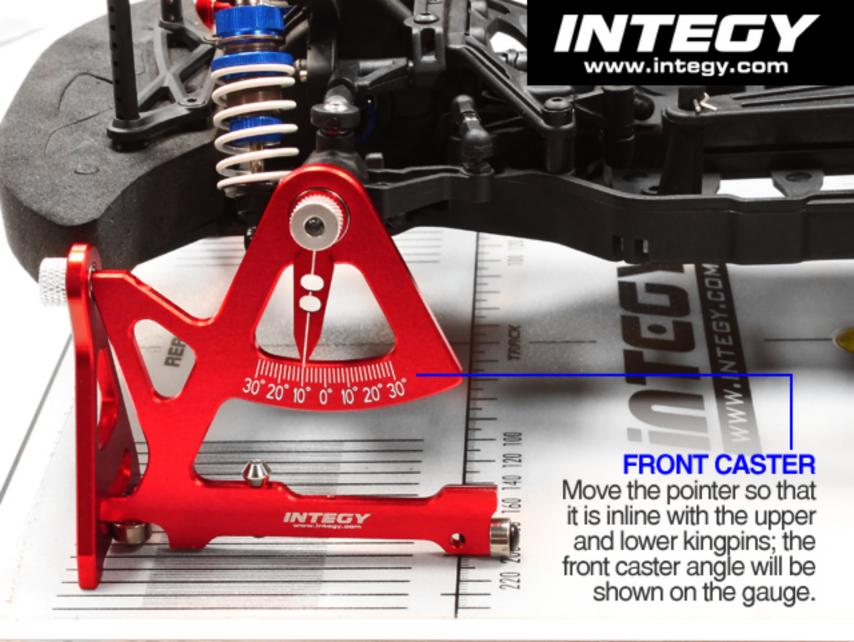

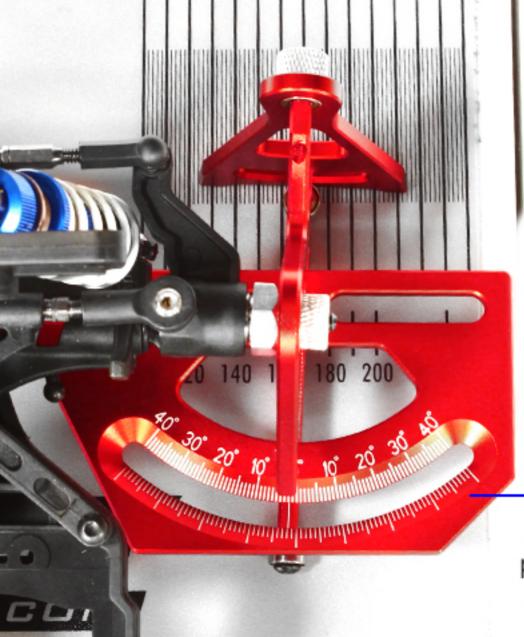






TOE-IN/TOE-OUT

The toe plate will show you the amount of toe-in or toe-out depending on the direction of the angle. shown on the gauge.

Make sure you slide the toe plate so that the axle of your vehicle is above 0-degrees.

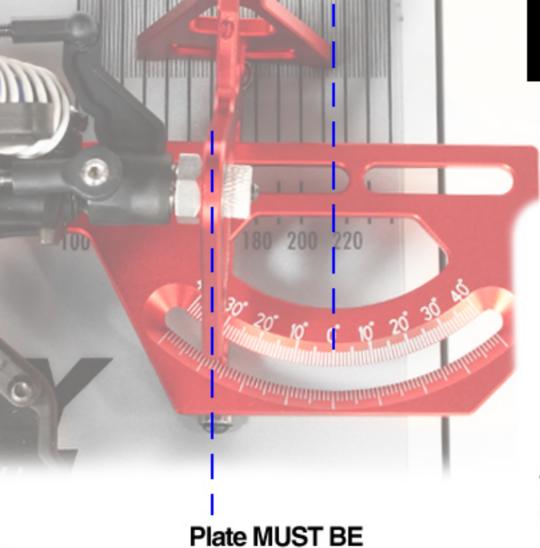

lined up with 0-degree mark!



TOE (WRONG WAY!)

Toe plate is not positioned correctly because the axle of the vehicle is not inline with the 0-degree marking on the toe plate.