


STEP 1 of 3: Trim and remove the center brace from the fender flare piece (Traxxas OEM Part #9713):

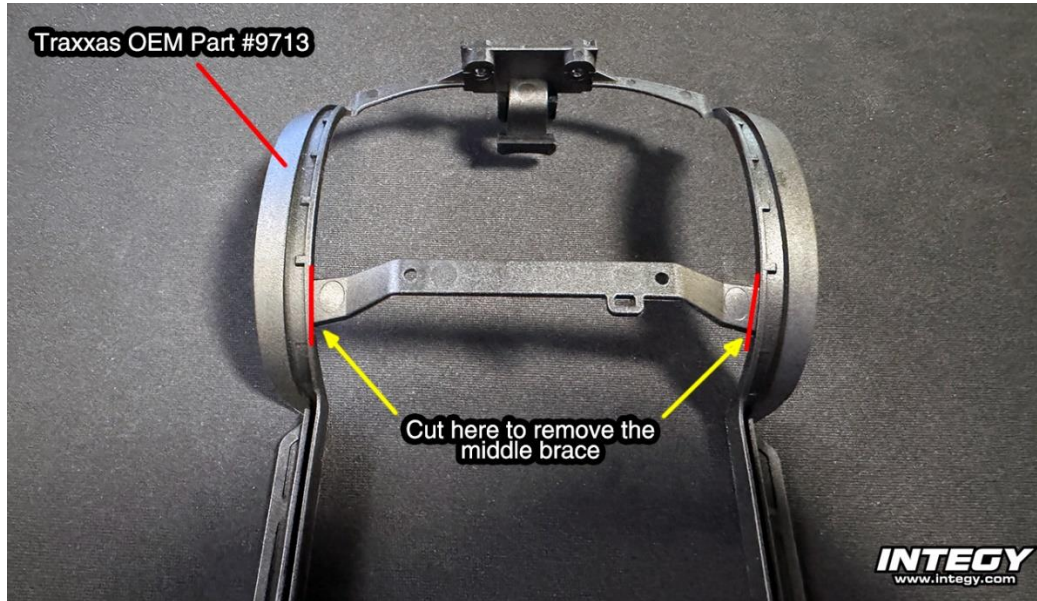

STEP 2 of 3: CAREFULLY trim and remove the mounting points from the windshield (Traxxas OEM Part #9714 or #9714x):



STEP 3 of 3: To install the cowl (included with Traxxas OEM Part #9715) you will need to use CA glue or double-sided tape to stick it to the main body:



You can now use the Traxxas Bronco body with Integy #C33176 Carbon Fiber Chassis.